



CONTRACTOR SERIES

BUILT TO LAST



RUGGED + DURABLE

UV DISINFECTION SYSTEMS

CWUV4C-101 series, for flow rates of 38 lpm (10 gpm)

CWUV4C-151 series, for flow rates of 57 lpm (15 gpm)

CWUV4C-R1 series, for flow rates of 30 lpm (8 gpm)

CWUV4C-R2 series, for flow rates of 57 lpm (15 gpm)

PRODUCT FEATURES

- 10 and 15 gpm axial flow system, 8 and 15 gpm rack system with single 10” or 20” sump
- 304 SS LPHO-based system (LPSO on CWUV4C-R1)
- Integral lamp life monitor, with both audible and visual indication of lamp life
- Reliable, industry proven, proprietary low pressure coated UV lamps with ceramic bases for durability and long life (10,000 hours on HO systems, 9,000 hours on SO systems)
- Constant current electronic controller in a splash proof case, fully potted ballast virtually eliminates common water damage issue
- 110-230V/50-60Hz.

CONDITIONS FOR USE


Your system will provide years of use provided the system is maintained on a regular basis as per the specifications outlined in the Owner’s Manual. For the system to perform as tested, the following water quality parameters must be met.

PARAMETER	LEVEL
Hardness	< 120 mg/L (7 gpg)
Iron (Fe)	< 0.3 mg/L (ppm)
Manganese (Mn)	< 0.05 mg/L (ppm)
Tannins	< 0.1 mg/L (ppm)
Turbidity	< 1 NTU
Transmittance	> 75% UVT

For levels outside those specified in the table above, please contact the factory for further technical assistance.

Manufacturer’s Warranty

REACTORS - Ten (10) year Limited Warranty
ELECTRONICS - Three (3) year Limited Warranty
UV LAMPS - One (1) year Limited Warranty
QUARTZ SLEEVES - One (1) year Limited Warranty



BEST WARRANTY IN THE UV INDUSTRY

Contact Charger Water for complete warranty document including conditions and exclusions.

EQUIPMENT SPECIFICATIONS

Model	CWUV4C-101	CWUV4C-151	CWUV4C-R1	CWUV4C-R2
Flow Rate (30mJ/cm² @ 95% UVT)	10 GPM	15 GPM	8 GPM	15 GPM
	37.9 lpm	56.8 lpm	30.3 lpm	56.8 lpm
	2.3 m³/hr	3.4 m³/hr	1.8 m³/hr	3.4 m³/hr
Filter Housing	N/A	N/A	5 micron sediment LC-105-CWUV	5 micron sediment LC-205-CWUV
Port Size	1"MNPT		1"MNPT	
Electrical	90-265V/50-60Hz.			
Plug Type	American, NEMA 5-15			
Lamp Watts	34	45	20	45
Power (Watts)	38 (36 @ 230V)	57 (48 @ 230V)	23 (21 @ 230V)	57 (48 @ 230V)
Maximum Current (amps)	1	1	1	1
Replacement Lamp	CWUV-L330C	CWUV-L420C	CWUV-L420	CWUV-L420C
Replacement Sleeve	CWUV-Q330	CWUV-Q420	CWUV-Q420	
Replacement Controller	CWUV4-CC		CWUV4-C	CWUV4-CC
Chamber Material	Polished 304 stainless steel, A249 pressure rated tubing			
Reactor Dimensions	3.5 x 16.5" (8.9 x 41.8cm)	3.5 x 20.0" (8.9 x 50.8cm)	3.5 x 20.0" (8.9 x 50.8 cm)	
Controller Dimensions	8.6 x 4.2 x 4" (21.7 x 10.8 x 10.2 cm)		6.8 x 3.6 x 4" (17.2 x 9.2 x 10.2 cm)	8.6 x 4.2 x 4" (21.7 x 10.8 x 10.2 cm)
Operating Pressure	0.7-10.3 bar (10-150 psi)		0.7-8.3 bar (10-120 psi)	
Operating Water Temp.	2-40° C (36 - 104°F)			
Lamp Change Reminder	YES (4-digit LED display)			
Visual Lamp Out Indicator	YES			
Audible Lamp Out Indicator	YES			
Shipping Weight	5.4 kg (11.9 lbs)	6.0 kg (13.2 lbs)	11.3 kg. (25 lbs.)	12.4 kg. (27.4 lbs.)



Charger Water
www.chargerwater.com



EPA Establishment
#088776-CAN-001

PN# 919371
Version Date: 08-2021



OWNER'S MANUAL

Operation & Installation Instructions



CWUV4-R1



CWUV5-R22C

CHARGER WATER - Rack-Mount Systems			
System	Rated Flow	Sediment	Carbon
CWUV4-R1 CWUV5-R1	8 gpm	YES (10")	NO
CWUV4-R2 CWUV5-R2	8 gpm	YES (20")	NO
CWUV4-R12 CWUV5-R12	8 gpm	YES (10")	YES (20")
CWUV4-R2C CWUV5-R2C	15 gpm	YES (20")	NO
CWUV4-R12C CWUV5-R12C	15 gpm	YES (10")	YES (20")
CWUV4-R22C CWUV5-R22C	15 gpm	YES (20")	YES (20")

Congratulations on purchasing this Charger Water UV Disinfection system.

TABLE OF CONTENTS

Safety Considerations	4
Before You Begin	4
Water Quality Parameters	5
Assembly	6
System Sizing	7
Location	7
Orientation	8
Installation	9
System Preparation	12
Cleaning the Quartz Sleeve	12
Cleaning the UV Sensor	13
Operation	13
CWUV4 Controllers	14
CWUV5 & CWUV6 Controllers	14
CWUV5 & CWUV6 Power-up Sequence.....	14
CWUV5 Operational Screens	15
CWUV6 Operational Screens	16
Lamp Countdown Sequence	16
Lamp Replacement (CWUV4 systems).....	17
Lamp Replacement (CWUV5 & CWUV6 systems).....	17
QR Codes	17
System Troubleshooting.....	17
Temperature Management Devices	19
Expansion Modules	20
Charger Water Rack-Mount UV System Specifications.....	21
Limited Warranty Statement:	22
Warranty Registration	23

Safety Considerations

It is important that care is taken when operating and/or maintaining your system.

1. Before servicing this equipment, disconnect the power cord from the electrical outlet.
2. **Energy given off by the UV lamp is harmful to your eyes and skin.** NEVER look directly at an illuminated UV lamp without adequate eye protection and always protect your skin from direct exposure to the UV light.
3. For complete disinfection, use **ONLY** genuine replacement parts.
4. Do not operate the unit if it has any damaged or missing components.
5. To avoid possible electrical shock, use only with a properly grounded electrical outlet.
6. Never perform any maintenance to the system unless you are comfortable in doing so. Contact the manufacturer for service instructions if required.
7. Do not use this system for any purpose other than what it was intended for. Misuse of this system could potentially cause harm to the user or others.
8. Your system is intended to be installed indoors and away from leaking plumbing. **DO NOT** plug the unit in if the system or any of the components are wet.
9. The disinfection system should be directly installed into a ground fault circuit interrupter (GFCI). If the use of an extension cord is required, the cord must be manufactured with a minimum of 16 gauge wire and care should be taken to avoid potential tripping hazards.
10. We recommend that a licensed plumber or certified technician install the system.

Before You Begin

The following will be needed for installing the UV system:

Tools

- Pipe cutter, hacksaw or other specialized tools required to cut into your existing plumbing (e.g. if you have PEX piping)
- Soldering tools (torch, flux, emery cloth and solder)
- Wrench (for tightening fittings)

Other Materials

- Inlet/outlet connections
- Teflon™ tape

Water Quality Parameters

UV disinfection is only effective if the UV light can pass through the water it needs to treat. This means that the quality of your water is very important in order to ensure complete disinfection.

Treated water should be tested for at the least the parameters listed below. If the water exceeds the listed parameters Charger Water strongly recommends that appropriate pretreatment equipment be installed (equipment required will depend on parameters being treated):

Hardness: <7 gpg (120 mg/L) – if hardness level is 7 gpg or slightly below the quartz sleeve must be cleaned periodically in order to ensure efficient UV penetration; if above the water must be softened.

Iron (Fe): <0.3 ppm (0.3 mg/L)

Manganese (Mn): <0.05 ppm (0.05 mg/L)

Turbidity: < 1 NTU

Tannins (organics): <0.1 ppm (0.1 mg/L)


UVT (transmittance): >85% (Please contact Charger Water if water has a UVT that is less than 80% for pre-treatment recommendations)

You can have your water tested at a private analytical laboratory or by your local dealer. It is always recommended to install pre-filtration of at least 5 microns prior to a Charger Water disinfection system.

Assembly

Unpack the system and ensure all the components are included with the system. Your system is shipped with the following components:

Charger Water UV (Standard output lamp systems)

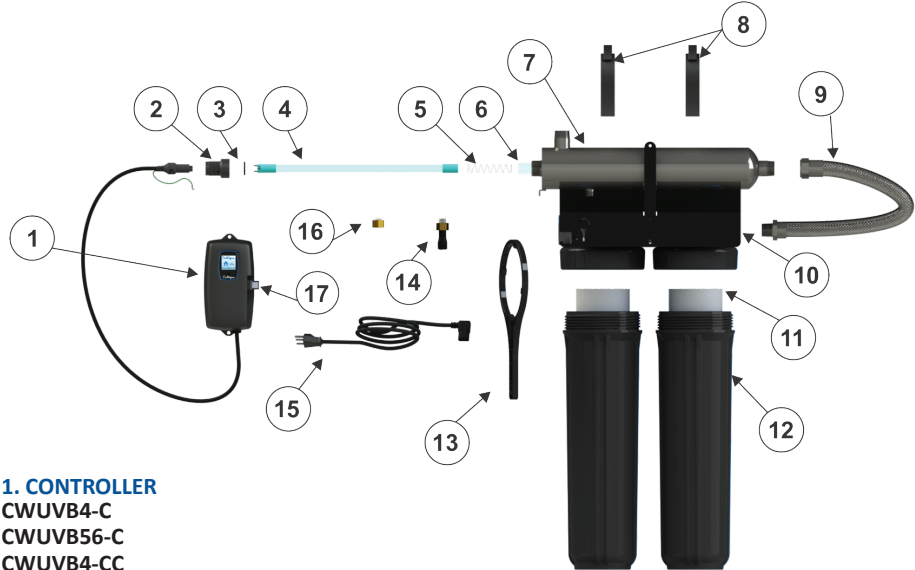

1. CONTROLLER

CWUVB4-C
CWUVB56-C
CWUVB4-CC
CWUVB56-CC

2. GLAND NUT

320006-CWUV

3. O-RING

300038-CWUV

4. UV LAMP

CWUV-L420
CWUV-L420C

5. SLEEVE SPRING

310039-CWUV

6. QUARTZ SLEEVE

CWUV-Q420

7. UV REACTOR

300064-CWUV

8. CLAMPS

390071-CWUV (each)

9. FLEXIBLE HOSE

310130-CWUV single filter
310126-CWUV double filter

10. MOUNTING PLATE

310122-CWUV single filter
310121-CWUV double filter

11. FILTER CARTRIDGES

LC-105-CWUV 10" sediment
cartridge
LC-205-CWUV 20" sediment
cartridge
LC-20C-CWUV 20" carbon
cartridge

12. FILTERS

160014-CWUV single filter,
10" sump
160015-CWUV single filter,
20" sump
160017-CWUV double filter,
10" & 20" sump
160018-CWUV double filter,
two 20" sumps

13. FILTER WRENCH

160011-CWUV

14. UV SENSOR

(optional module)

CWUV-S2

CWUV-S3

310040-CWUV Sensor o-ring

15. IEC POWER CABLE

(on CWUV4-CC/CWUV56-CC
units only)

260004-CWUV North
American Nema 5/15,
3 prong grounded

16. GLOW PLUG

300016-CWUV Complete
Assembly

310026-CWUV Glow Plug

310040-CWUV O-ring

390007-CWUV Brass Nut

17. LAMP KEY

Comes with new UV lamps

(not sold separately)

Not for use on CWUV4/
CWUV4-CC systems

System Sizing

The **Charger Water** rack-mount UV system is designed as a do-it-yourself (DIY) system with a single inlet and outlet port. This system comes fully assembled with the exception of a single stainless steel hose connection that comes unattached, yet fully taped for easy installation. **PLEASE NOTE** that increasing the flow above this rating or disinfecting water that does not meet the quality parameters will decrease the dose and therefore compromise the efficacy of the system.

- 1. Be sure no water is being used in the home.
- 2. Open a faucet or tap nearest the pressure system and run until the well pump starts.
- 3. Close the faucet and using a second hand watch, record the length of time in seconds until the pump stops. This is known as the cycle time.
- 4. Then using a container of known volume, preferably in US Gallons, open the faucet or tap nearest the pressure system and measure the amount of water drawn off until the pump starts again. Depending on the size of the container used, it is acceptable to turn the faucet on and off to empty the container. This measurement is known as the draw down.

To calculate the pressure system flow rate divide the draw down by the cycle time and multiply that by 60.

Draw Down _____ ÷ **Cycle Time** _____ x 60= _____ **Pumping Rate in USGPM**

Location

Choose a location where the main cold water line is accessible. The system must be installed after other water treatment equipment (i.e. softener), but before any branches (See Figure 1). **PLEASE NOTE:** All UV disinfection systems are intended for indoor use only as they should not be exposed to the elements. The controller will require a ground fault circuit interrupter (GFCI or GFI) outlet and should be mounted beside or above the reactor.

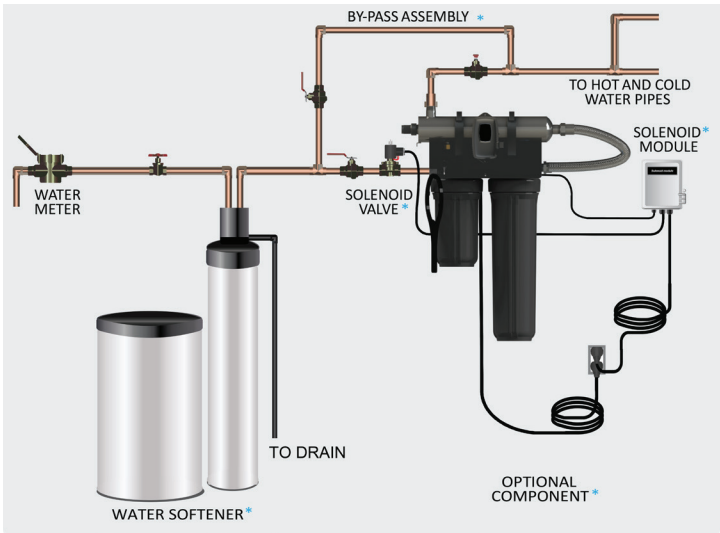


Figure 1. Typical Installation

Orientation

This system has the ambidextrous capability of being able to have the main water inlet enter from either the left hand side or right hand side of the unit. The units comes pre plumbed from the factory for a left hand water inlet. To change to a right hand water inlet follow these simple steps (See Figure 2):

Step 1: Remove the filter sump housings (either one or two housings depending on the model purchased) from the filter head and set aside.

Step 2: Remove the filter head screws from the top mounting plate (4 screws for a single filter model and 8 screws for a double filter model).

Step 3: Carefully lower the filter head (or heads) from the rack assembly and rotate 180 degrees. Reassemble onto the rack assembly and take note of the arrows located on the top of the filter heads indicating water flow (which now should be indicating a flow direction of right-to-left).



Figure 2. System Orientation (water inlet)

Step 4: Remove the stainless steel UV reactor from the two plastic clamps located on the top of the rack. Carefully remove the top straps securing the reactor with the aid of a standard (slot) screwdriver). Rotate the reactor 180 degrees (with the inlet now facing to the left and the lamp connections located towards the right) and place back into the cell clamps and re affix the two top straps.

In either the left or right configurations, to facilitate lamp removal, ensure there is enough space at the lamp connector end to safely remove the UV lamp and/or quartz sleeve (See Figure 3).

Installation

Step 1: Once both the orientation and location have been selected, securely fasten the rack to a suitable backing. As the rack system is extremely heavy when filled with water, it is imperative that the rack be mounted with suitable fasteners for the particular installation. Mounting to a drywall backing is not suitable, unless the rack is fastened directly to the wall studs.

Step 2: The use of a by-pass assembly is recommended as it will allow you to isolate the UV system. This will allow for easier access in case maintenance is required.

Step 3: For water supplies where the maximum flow rate is unknown, a flow restrictor is recommended so that the rated flow of your particular system is not exceeded. The flow restrictor should be installed on the inlet port of the reactor.

Step 4: It is recommended to have a licensed plumber connect the UV reactor to the water supply and may be a requirement depending on where you are located.

Step 5: Connect both the inlet and outlet to the rack system with the applicable connections based on your particular plumbing requirements. The inlet port of the filters is a 1" FNPT connection and the outlet port of the UV reactor is a 1" MNPT connection.

Step 6: Once the system has been plumbed in, gently remove the quartz sleeve from its packaging being careful not to touch the length with your hands. The use of cotton gloves is recommended for this procedure as oils from the hands can leave residue on the sleeve and lamp which can ultimately block the UV light from getting to the water.

Carefully slide the sleeve into the reactor until you can feel it hit the opposite end of the reactor. Align the sleeve so it is centered along the length of the reactor, then gently push it in to lock it into the internal centering springs in the far side of the reactor. **CAUTION:** Pushing too hard when the sleeve is not aligned can damage the centering springs. Slide the o-ring onto the sleeve until it is butted up against the reactor (See Figure 4).

Step 7: Hand tighten the provided gland nut over the quartz sleeve onto the threaded end of the reactor. It has a positive stop to prevent over-tightening. A firm force may be required to fully tighten the gland nut, but **DO NOT USE TOOLS** for this step. Insert the provided stainless steel compression spring into the quartz sleeve. The spring works with the lamp and lamp connector to create the proper lamp alignment. **PLEASE NOTE:** DO NOT install a UV lamp inside the quartz sleeve without the sleeve spring in place.

Step 8: Install the filter cartridges in their appropriate housings. For the Charger Water branded products, please refer to the chart located on page 12 of this manual. **PLEASE NOTE:** This chart indicates the correct cartridge position for the default "left-hand" orientation with the water inlet located on the left side of the rack system. If the orientation was switched, the cartridge placement must also be switched. Once the cartridges are in place, use the supplied filter wrench to "snug" the filter housing onto the filter head (See Figure 5).

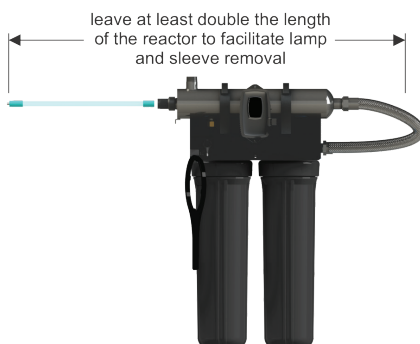


Figure 3. Lamp Removal Spacing

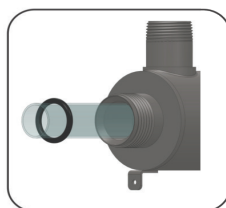


Figure 4. Quartz Sleeve Installation



Figure 5. Cartridge Removal

Step 9: Install the UV sensor (**CWUV6 systems only**). Align the flat portion so it faces the gland nut end and matches up with the half metal lip on the sensor port (see Figure 6). Insert the sensor so it is fully seated and hand tighten the sensor nut. Insert the sensor connector into the IEP port located on the right side of the controller (Figure 7). For the sensor to be recognized by the controller, the controller power must be plugged in last. **Do not plug the controller power cord in before the last step.**

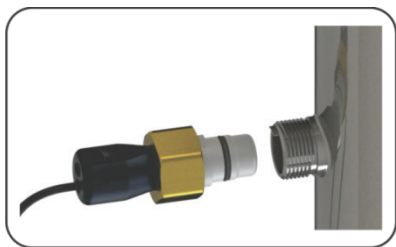


Figure 6. UV Sensor Installation



Figure 7. IEP Connection

Step 10: The reactor is now ready for water flow. When all plumbing connections have been completed, slowly turn on the water supply and check for leaks. Make sure the by-pass valves are functioning properly and that the water is flowing through the reactor. The most common leak is from the o-ring not making a proper seal on the reactor. For new installations, review steps 6 and 7. For older systems drain the reactor, remove the o-ring, dry it and reapply silicon grease. Reinstall the o-ring ensuring that it is properly sealed against the reactor and check again for leaks. To help vent the pressure from the system while the system is filling up with water, it is a good idea to physically depress the red pressure relief button located on the top of the filter head. Simply depress the button down, venting the air, until water appears at the button. If the system has two filters, perform this function on the housing closest to the water inlet first and then on the next filter in sequence.

Step 11: Always hold UV lamps by their ceramic ends, not by the lamp quartz. Remove the lamp from its packaging. Again, the use of cotton gloves is recommended. Remove the lamp key from the lamp's connector and set it aside for the next step. Be careful to not touch the key's exposed contacts. Insert the UV lamp into the reactor, being careful not to drop it.

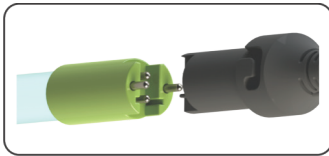


Figure 8a. Standard Output UV Lamp Connection

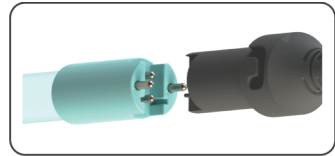


Figure 8b. High Output UV Lamp Connection

Step 12: Install the lamp key into the controller (**CWUV5, CWUV6 systems only**). The key always comes packaged with the lamp and sits on the connector. With the key removed from the lamp, orient it so the label is upright and facing you. The key will plug into the lamp key port on the right side of the controller (Figure 9).

Step 13: Plug the lamp connector into the lamp. Note the keying for proper alignment (see Figure 8a, 8b). Insert the lamp connector into the gland nut and turn the connector approximately $\frac{1}{4}$ turn to lock the connector to the gland nut as in Figure 9.



Figure 9. Lamp Key Installation



Figure 10. Connector

Step 14: Tighten the captive ground screw to the ground lug on the UV reactor to ensure proper grounding.

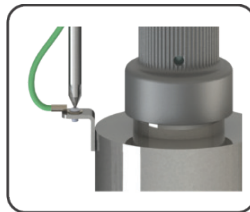


Figure 11. Ground Screw Connection

Step 15: Your system is now ready to be plugged into the appropriate GFCI protected outlet. Refer to the following section before any water is allowed to flow through the system.

Note: Installation of your Charger Water disinfection systems shall comply with applicable provincial/state & local regulations.

System Preparation

With a new installation, or any time the UV system is shut down for service, without power, or is inoperative for any other reason, the lines in the home or facility could be contaminated. Use the following steps to prepare the lines throughout the entire home or facility.

Step 1: Check for and remove any “dead ends” in the lines throughout the home as these can harbor dirt and debris. Plug in the UV system and wait until it is ready for operation.

Step 2: Remove the filter cartridge from the last sump and fill it with 1-2 cups of household bleach (most are 5.25% chlorine). Replace the sump and slowly turn on the water supply.

Step 3: At a water outlet, run the water until bleach can be smelled. Repeat this for all faucets, toilets, shower heads, refrigerators, outdoor taps, the washing machine, dishwasher, etc. at the home or facility. Once finished, wait a minimum of 30 minutes before continuing.

Step 4: Reinstall the filter cartridge into the sump and flush the chlorine solution by opening all faucets until chlorine can no longer be detected. Your system is ready to use.

Cleaning the Quartz Sleeve

Depending on the water quality, the quartz sleeve may require periodic cleaning. At a minimum, the quartz sleeve should be cleaned on an annual basis. The following steps outline a basic cleaning procedure.

Step 1: If a by-pass assembly is installed, shut the inlet valve off to prevent water flow through the system. Otherwise, turn off main water inlet valve (and/or turn off the water pump).

Step 2: Disconnect power cord of UV system from electrical outlet.

Step 3: Release water pressure by opening a downstream faucet and then close the outlet shut-off valve (if any). If there is no outlet shut-off valve, expect water to drain from the system as the head pressure in the system will cause the water to flow back down.

Step 4: Remove the captive ground screw from the ground lug on the UV reactor.

Step 5: Remove the lamp connector from the reactor (gland nut) by pushing the lamp connector in and turning it ¼ turn counter-clockwise. Disconnect the lamp connector from the lamp. CAUTION: the lamp may be hot!

Step 6: Being careful to touch only the ceramic ends, remove the lamp out of the reactor.

Step 7: Unscrew the gland nut from the reactor exposing the end of the quartz sleeve.

Step 8: Remove the quartz sleeve and o-ring by **gently twisting and pulling** the quartz sleeve.

Step 9: Using a soft, lint-free cloth or towel wipe the sleeve down using a commercial scale cleaner (i.e. CLR® or LIME-A-WAY®). This removes scaling or iron deposits that may be on the outside of the quartz sleeve. Be careful not to get any moisture or liquids inside of the sleeve.

Step 10: Dry the sleeve with separate cloth.

Step 11: Replace the o-ring and slide the sleeve back into the reactor following steps 7 and 8 from the installation section of the manual.

Cleaning the UV Sensor

Depending on the water quality, the UV sensor may require periodic cleaning. At a minimum, the UV sensor should be cleaned on an annual basis. The following steps outline a basic cleaning procedure.

Step 1: If a by-pass assembly is installed, shut the inlet valve off to prevent water flow through the system. Otherwise, turn off main water inlet valve (and/or turn off the water pump).

Step 2: Disconnect power cord of UV system from electrical outlet.

Step 3: Release water pressure by opening a downstream faucet and then close the outlet shut-off valve (if any). If there is no outlet shut-off valve, expect water to drain from the system as the head pressure in the system will cause the water to flow back down.

Step 4: Place something under the reactor to catch any water that may come out of the reactor during the removal of the UV sensor.

Step 5: Unscrew (counterclockwise) sensor nut from the reactor and pull the sensor slowly out of the sensor port.

Step 6: Holding the sensor in your hand wipe the flat portion (sensor face) of the sensor with isopropyl alcohol using a clean lint-free cloth.

Step 7: Replace sensor following step 9 from the installation section of the manual.

Operation

Charger Water systems come with a feature laden controller that incorporates both the lamp driver (ballast) and control features in one water-tight case. Four main controllers are available for the systems (depending on your model). All four models feature a power factor corrected, constant current lamp driver with a universal power input.

Please Note: While the LED or display screen is red and the buzzer is sounding the water from the system should NOT be consumed. If any water does pass through the system during this period, please follow the disinfection procedure as outlined in this manual before the water is consumed. For CWUV4 and CWUV5 systems, even though they have a visual and audible warning built into the controller, a green LED or status screen does not necessarily indicate that the water coming from this system is in fact potable (safe to drink). These systems do not measure the level of disinfection; they simply measure the “on-off” status of the lamp. Please have your water checked for microbiological contaminants on a regular basis.

CWUV4 Controllers



CWUV4 Series



CWUV4-C Series

Simplistic in operation, these systems feature a tri-colour LED that indicating system status and a 4-digit display to indicate lamp life remaining. Pressing the button will change the display to indicate total running time. When the UV lamp is on and within its operating age, the LED will be green. When the UV lamp is not on or the lamp life has expired, the LED will be illuminated red and an audible buzzer will be sounding. To remedy this condition, the UV lamp must be replaced with a new genuine Charger Water lamp.

CWUV5/6 Controllers



CWUV5/6 Series



CWUV5/6-C Series

A full colour LCD screen provides the user with a detailed description of the system’s performance in addition to providing any applicable fault messages an system diagnostics. The controllers used in both the CWUV5 and CWUV6 are identical. The difference is that the CWUV6 series of products includes a UV intensity monitor. All CWUV5 and CWUV6 controllers include an “infinite expandability port” located on the right side of the controller. Simply plug in an optional UV sensor module into the expandability port of a CWUV5 controller and the system will now monitor the UV intensity of the system!

CWUV5/6 Power-up Sequence




On start up, the controller will run through a diagnostic start-up and the sequence will be displayed as follows on the colour LCD:



Next, the controller checks for and initializes any optional modules that may be attached to the system.

Optional Modules Check


-  - UV Sensor
-  - Solenoid
-  - 4-20 mA
-  - WIFI
-  - Remote Alarm
-  - Flow Meter

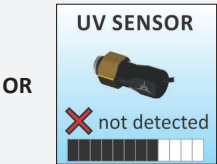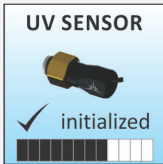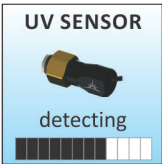

OR

A final module screen is displayed showing which specific modules were initialized.

The controller then displays the lamp optimization screen for 60 seconds to allow the lamp to reach its optimum output. Finally, a final “start-up complete” screen is displayed. The system will now be ready to disinfect water flow.

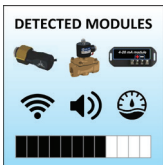

all detected modules



lamp reaching max output



successful start-up





CWUV5 Operational Screens

On systems without the UV monitor, the default screen shows the **Home Screen**. At any point during operation the user is able to scroll through the **Home Screen**, **Lamp life remaining**, **QR Code**, **Contact Info** and **Maintenance Parts** screens by pressing the button located on the front of the controller.




CWUV6 Operational Screens


On systems with the UV monitor, the system will display the same screens as on the CWUV5 except the UV Intensity replaces the home screen. The UV Intensity screen displays the level of UV light detected by the sensor. UV intensity can be affected by poor water quality, scaling on the quartz sleeve and/or sensor, lamp failure or lamp expiring. The following screens show the UV Intensity dropping.

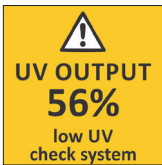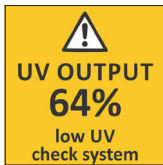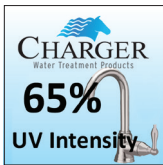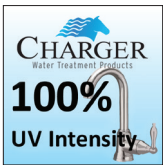


Below 56%, the numbers and warning sign turn red and an audible chirp is given by the ballast every 15 seconds. Below 51%, the screen is solid red and a constant audible alarm is given. This alternates with a screen indicating “water may be unsafe for consumption”. With the solenoid module, the controller de-activates the solenoid valve, shutting off all water flow.

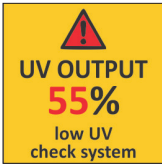

audible chirp every
15 seconds

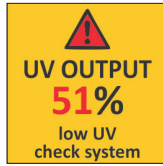

audible chirp every
15 seconds

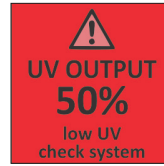

constant audible
alarm



cycles with red low
uv screen

Lamp Countdown Sequence

The system counts down the number of days until a lamp change is required.

CWUV6
CWUV5



CWUV4



At thirty days remaining, the LED or display screen will change to a yellow caution indicator. At seven days remaining, the system will additionally repeat an audible chirp. Past the zero day threshold, the LED or display screen changes to solid red with a continuous buzzer.

CWUV6
CWUV5



CWUV4



At any point during this sequence, the audible chirp or alarm can be deferred for seven days by holding the controller button down for a period of five seconds. The number of deferrals used will be displayed as below. Once the deferral expires, the alarm will sound once again. The deferral can be repeated up to three times. **PLEASE NOTE:** At any point after lamp expiration, the water may be unsafe for consumption and should not be consumed without another form of disinfection.



Lamp Replacement (CWUV4 systems)

After the lamp is expired, it must be replaced with the same part number as indicated by the label on the reactor. Begin replacing the lamp by unplugging the power for the controller, then refer to **Installation**, starting with step 11 (page 11) for instructions on installing the new lamp. To reset the timer in the controller, firmly hold down the button on the controller for 10 seconds. The controller will read “rSt3”, “rSt2”, “rSt1” and then beep. The button can now be released, the lamp countdown timer has been reset.

Lamp Replacement (CWUV5 & CWUV6 systems)

After the lamp is expired, it must be replaced with the same part number as indicated on the Maintenance Parts screen or on the label on the reactor. With the system powered down, remove and discard the lamp key from the controller. The replacement lamp is packaged with a lamp key on the connector at the end of the lamp. Remove the key from the lamp and place it in the controller. Refer to **Installation**, starting with step 11 (page 11) for instructions on installing the new lamp.



QR Codes






A **QR code** (Quick Response code) is a matrix barcode first designed for the automotive industry. Charger Water uses the QR code to store a link to a specific page on our website. Users with a camera phone equipped with the correct reader application can scan the image of the QR code and over a wireless network connect to a Charger Water web page in the phone’s browser. Charger Water’s QR webpage has information on how to purchase replacement components as well as a helpful video directory on system servicing (i.e. How to change a UV lamp or quartz sleeve). To access the QR code on the controller, press the control button until the QR code screen appears.





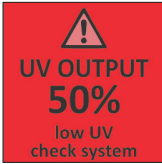

System Troubleshooting


Hard Alarms: The following give a constant audible alarm. If present, the solenoid valve is closed, and the 4-20, remote alarm and Wifi modules transmit the alarm.

System Display	Problem	Resolution
	The system has detected a problem with the lamp.	Reset lamp protection circuit -unplug unit for 10 seconds. Replace the lamp with the part as indicated on the silver label on the reactor or on the Maintenance parts screen.
	Although the lamp is powered and visibly illuminated, due to the lamp’s age its UV output is no longer sufficient for proper disinfection.	Replace the lamp with the part as indicated on the silver label on the reactor or on the Maintenance parts screen.

System Display	Problem	Resolution
	Low UV Intensity.	Remove and clean the quartz sleeve and sensor. Check water quality meets requirements on page 5 and add filtration as required. Replace lamp.
LAMP INCORRECT Required Part: CWUV-L470 Installed Part: CWUV-L290	Wrong lamp or sensor installed.	Replace component with proper model as indicated.
UV SENSOR FAILURE  check connection or see manual	The UV sensor is no longer communicating with the system.	Ensure all modules are connected properly to the system and to each other.
CONNECTION FAILURE  check connection or see manual	A bad connection has been detected in the IEP port.	Modules can be tested individually by plugging in one at a time and cycling power to the system.
LAMP KEY NOT FOUND  check connection or see manual	Missing or incorrect lamp key.	Ensure the lamp key (packed with the lamp, on the connector) is installed. Unplug and reinstall the key. Ensure the key part number matches Lamp on Maintenance Parts screen.
LAMP KEY INVALID  check connection or see manual		

Soft Alarms: The following remaining errors give a 15 second audible chirp only

System Display	Problem	Resolution
SOLENOID FAILURE  check connection or see manual	The module indicated is no longer communicating with the system.	Ensure all modules are connected properly to the system and to each other.
4-20 mA FAILURE  check connection or see manual		Modules can be tested individually by plugging in one at a time and cycling power to the system.
REMOTE ALARM FAILURE  check connection or see manual		Replace any module that is not detected when plugged directly into the controller.
WIFI FAILURE  check connection or see manual		

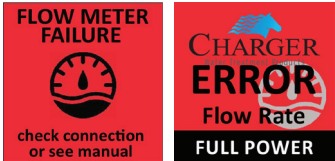System Display	Problem	Resolution
 <p>FLOW METER FAILURE check connection or see manual</p> <p>CHARGER ERROR Flow Rate FULL POWER</p>	Refer to flow meter manual for detailed troubleshooting	

Warning: After any hard alarm, the home or facility should be disinfected. Follow the steps under the “System Disinfection” heading.

Boil Water Advisory: If any failure occurs on a Charger Water system, the water must not be used for human consumption until the system is returned to a safe operational mode. If the water is used for human consumption during this period, the water must be boiled (minimum 20 minutes at a full boil) prior to consumption.

Temperature Management Devices

Your UV system is designed to run continuously to ensure optimal disinfection. However, during periods when no water is drawn through the system, the energy from the disinfection process can cause the temperature of the water inside the chamber to rise. In extreme situations elevated water temperature or the fluctuation in temperature can lower the output of the UV lamp. In these cases, or if the elevated water temperature is a nuisance, Charger Water recommends one of the following forms of temperature management devices.



Cooling Fan

Designed for use on high output systems, the fan runs continuously to cool the water by forced convection. The long-life fan is powered independently using a compact modular power adapter that operates from 90-265V (47-63Hz).Order PN **MOD-FAN-CWUV** (only fits CWUV4-C/CWUV5-C/CWUV6-C systems).



Temperature Relief Valve (TRV)

On reaching a higher temperature, the TRV is designed to drain a small amount of water to allow fresh, cooler water to enter the system. The TRV works without power and comes complete with 10’ of drain line. Order PN **MOD-TRV0.5-CWUV** for 1/2” ports, PN **MOD-TRV0.75-CWUV** for 3/4” ports, PN **MOD-TRV1-CWUV** for 1” ports and PN **MOD-TRV1.5-CWUV** for 1 1/2” ports.



Expansion Modules

CWUV5 and CWUV6 controllers incorporate an “**Infinite Expandability Port**” (IEP) which allows for expansion to the UV sensor and all other modules. Each module (including the sensor) comes with both a male and female connection. Connect any device to the controller and all subsequent devices are then connected into the female end of last device added in a “daisy chain” configuration.

The following optional expansion modules are available for use on CWUV5 and CWUV6 UV controllers. Contact your authorized distributor for purchasing information.



REMOTE ALARM CONNECTION MODULE: Allows for a connection to a remote device such as a buzzer, light, alarm system, PLC, etc., via a pair of contacts. In normal operation the OK and COM contacts will be connected, and in a fault condition (Low UV, Lamp fail, Power Fail), the Fault and COM contacts will be connected. Maximum Contact Rating is 1A-120V AC/DC (use 16-22 AWG). Order PN **MOD-RAM-CWUV**.



SOLENOID CONNECTION MODULE: Connects a NORMALLY CLOSED line voltage solenoid valve to the system. On a non-monitored system, the solenoid will only close on a lamp failure error. On a monitored system, the solenoid is closed when the UV level drops below 50%. Also note that in cases where emergency use of untreated water is required, the controller can be placed into a manual override mode allowing for the flow of water in an alarm condition. Order PN **MOD-SOL1-CWUV**.



4-20 mA MODULE: Outputs a 4-20mA signal of the UV output to a remote device such as a data logger or computer. Order PN **MOD-420-CWUV**.




The **WiFi module** and accompanying **IoT** application allows you to connect your UV system to a smart phone, tablet, computer or other connected platform. View system status, receive SMS or email messages of alarm conditions and monitor the health of your UV from anywhere via this connected platform. Connect the device via the APP found on Google Play or the APP Store. Connect the device via the APP found on Google Play or the APP Store. Connect your UV device to your router, download the software for your connected device and have peace of mind that your UV system is fully operational.



The **Ultrasonic Flow Meter** enables your UV system to dim power in times of low to no flow, saving you money on energy, reducing water temperature, and decreasing the risk of fouling.

CHARGER WATER Rack-Mount UV System Specifications

	CHARGER WATER EQUIPMENT SPECIFICATIONS					
	RACK-MOUNT UV SYSTEMS					
MODEL	CWUV4-R1 CWUV5-R1	CWUV4-R2 CWUV5-R2	CWUV4-R12 CWUV5-R12	CWUV4-R2C CWUV5-R2C	CWUV4-R12C CWUV5-R12C	CWUV4-R22C CWUV5-R22C
Flow Rate (@30ml/cm²)	8.0 gpm			15.0 gpm		
	30.3 lpm			56.8 lpm		
	1.82 m³/hr			3.4 m³/hr		
Flow Rate (@40ml/cm²)	5.6 gpm			12 gpm		
	21.2 lpm			45.4 lpm		
	1.3 m³/hr			2.7 m³/hr		
Filter Housing - 1	5 micron sediment LC-105-CWUV	5 micron sediment LC-205-CWUV	5 micron sediment LC-105-CWUV	5 micron sediment LC-205-CWUV	5 micron sediment LC-105-CWUV	5 micron sediment LC-205-CWUV
Filter Housing - 2	N/A	N/A	high capacity carbon LC-20C-CWUV	N/A	high capacity carbon LC-20C-CWUV	high capacity carbon LC-20C-CWUV
Port Size	1" FNPT (filter side) / 1" MNPT (UV side)					
Electrical	90-265V/50-60Hz.					
Plug Type	American: NEMA 5-15P					
Lamp Power (Watts)	20 (standard-output lamp)			45 (high-output lamp)		
Power (Watts)	23 (21 @ 230V.)			57 (48 @ 230V.)		
Replacement Lamp	CWUV-L420			CWUV-L420C		
Replacement Sleeve	CWUV-Q420					
Reactor Dimensions	8.9 x 50.8 cm (3.5 x 20")					
Chamber Material	Polished 316L Stainless Steel, A249 Pressure Rated Tubing					
Controller Dimensions	17.2 x 9.2 x 10.2 cm (6.8 x 3.6 x 4")			21.7 x 10.8 x 10.2 cm (8.6 x 4.2 x 4")		
Operating Pressure	0.7-6.9 bar (10-100 psi)					
Operating Water Temperature	2-40° C (36-104° F)					
UV Monitor	OPTIONAL (optional UV module (CWUV-S2) for CWUV5, (CWUV-S3) for CWUV5-C sold separately)					
Solenoid Output	YES (optional solenoid module (MOD-SOL1-CWUV) sold separately)					
Dry Contacts	YES (remote alarm module (MOD-RAM-CWUV) sold separately)					
4-20mA Output	YES (remote alarm module (MOD-420-CWUV) sold separately)					
Lamp Change Reminder (audible & visual)	YES					
Lamp Out Indicator (audible & visual)	YES					
Shipping Weight	11.36 kg (25 lbs)	12.45 kg (27.4 lbs)	18.45 kg (40.6 lbs)	12.82 kg (28.2 lbs)	18.82 kg (41.4 lbs)	20.18 kg (44.4 lbs)

Limited Warranty Statement:

Products manufactured by Charger Water are warranted to the original user only to be free of defects in material and workmanship for a period as specified below. This warranty only applies to the original purchaser and is not transferable.

UV SYSTEMS

Ten (10) year Limited Warranty on the stainless steel reactors, from the date of original purchase, or installation (proper documentation required for verification).

ELECTRONICS

Three (3) year Limited Warranty on the ballasts and controllers, from the date of original purchase, or installation (proper documentation required for verification).

UV LAMPS, UV SENSORS & QUARTZ SLEEVES

One (1) year Limited Warranty on all ultraviolet lamps, UV sensors and quartz sleeves from the date of original purchase, or installation (proper documentation required for verification).

This Charger Water Ultraviolet Disinfection System will be repaired or replaced, at our sole option, providing that the ultraviolet system or any component is defective in materials or workmanship for the periods outlined above and subject to the “Limitations of Warranty” as outlined below. Charger Water’s liability under this warranty shall be limited to repairing or replacing the product, without charge, F.O.B. Charger Water’s closest Distribution Facility or authorized service depot. Charger Water will not be liable for any costs of removal, installation, transportation, or any other charges which may arise in connection with a warranty claim. Charger Water will not be liable for damage or wear to products caused by abnormal operating conditions, accident, abuse, misuse, unauthorized alteration or repair, or if the product was not installed in accordance with the Manufacturers printed installation and operating instructions.

LIMITATIONS OF WARRANTY

This warranty does not apply to any of the following:

- Water Quality Parameters lie outside of the following ranges
 - Hardness > 120 mg/L (7 gpg)
 - Iron > 0.3 mg/L (ppm)
 - Manganese > 0.05 mg/L (ppm)
 - Tannins > 0.1 mg/L (ppm)
 - Turbidity > 1 NTU
 - Transmittance (UVT) < 75%
- A product that has been incorrectly installed according to the technical installation manual.
- A product that has been modified in any manner, unless approved by the manufacturer.
- A product where the serial number has been altered, defaced or removed.
- Damage caused by the use of parts that are not compatible, suitable and/or authorized by Charger Water for use with the product (e.g. non-original lamps or sleeves).
- Damage caused during shipment of the product.
- Water damage is found inside ballast housing or controllers.
- Product is installed outdoors in direct contact with the environment (rain).
- Product is installed in freezing temperatures.
- Product is used in conditions that exceed Charger Water’s specifications.

TO GET WARRANTY SERVICE

Please contact the Dealer or Distributor where the product was originally purchased to obtain service under this warranty. Your Dealer / Distributor will obtain a Warranty Return Authorization and will then need to return the product to Charger Water, together with proof of purchase and installation date, failure date, and supporting installation data. Any defective product to be returned must be sent freight prepaid.

CHARGER WATER WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSSES, OR EXPENSES ARISING FROM INSTALLATION, USE, OR ANY OTHER CAUSES. THERE ARE NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTEND BEYOND THOSE WARRANTIES DESCRIBED OR REFERRED TO ABOVE.

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY MADE BY CHARGER WATER WITH RESPECT TO THIS ULTRAVIOLET DISINFECTION PRODUCT, AND IS GIVEN IN LIEU OF ANY OTHER WARRANTY. TO THE EXTENT ALLOWED BY APPLICABLE LAW, ANY AND ALL EXPRESS OR IMPLIED WARRANTIES NOT SET FORTH HEREIN ARE WAIVED AND DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. CHARGER WATER'S LIABILITY UNDER THIS LIMITED WARRANTY IS LIMITED SOLELY TO THOSE LIABILITIES SET FORTH ABOVE. IN THE EVENT THAT ANY PROVISION OF THIS LIMITED WARRANTY SHOULD BE FOUND TO BE OR BECOME INVALID OR UNENFORCEABLE UNDER APPLICABLE LAW, THE REMAINING TERMS AND CONDITIONS HEREOF SHALL REMAIN IN FULL FORCE AND EFFECT AND SUCH INVALID OR UNENFORCEABLE PROVISION SHALL BE CONSTRUED IN SUCH A MANNER AS TO BE VALID AND ENFORCEABLE.

Warranty Registration

It is imperative that you complete the warranty registration process. This not only registers your UV disinfection system for the provided manufacturer's warranty, but also allows the factory to provide you with any important product updates or technical bulletins concerning your product. The registration process is a simple process and can ONLY be done online at **www.uv-warranty.com**. Please ensure that ALL information is filled in, including a valid e-mail address. **PLEASE NOTE:** This information is for the sole purpose of technical support for your disinfection system and will not be used, or sold, to any other organization for any other purpose.



Charger Water
www.chargerwater.com



EPA Establishment
#088776-CAN-001

PN: 919366
Version Date: 02-2023